

MICROTECH



# EXTERNAL SPHERE COMPUTERIZED GAUGE

## USER MANUAL



Calibration ISO 17025:2017



ISO 9001:2015

Item No	Radius			Resolution	Display	Data output
	Range	Type				
	mm	inch	μm			
1250711206	320-1250	12-50"	external	1	Color 1.5" Touch-screen	WIRELESS+USB



Select SPHERE

-Come throw menu to **Formula mode** and select **SPHERE formula**

Set ZERO position on flat platfrom and push ZERO button, then you can meake measuring.

(In ranges close to Zero - will be indicating big values, about formula recalculation from linear to radius measurings, don't care for this)

# TECHNICAL DATA

MICROTECH



Parameters	
LED display	color 1,54 inch
Resolution	240x240
Indication system	MICS 3.0
Power supply	Rechargeable Li-Pol battery
Battery capacity	450-800 mAh (depends of device)
Charging port	micro-USB
Case material	Aluminium
Buttons	Switch (Multifunctional), Reset
Wireless data transfer	up to 50m on open area

## CHARGING



**BUILT-IN BATTERY** - rechargeable Li-Pol battery

For charging connect USB cable  
Charging process indicating  
on Battery status  
(switch on device)



# WIRELESS DATA TRANSFER

Activate WIRELESS data transfer in CONNECTION menu

Switch on Wireless data transmission

Activating multifunctional button to save value to  
memory or send data by touchscreen or button push



Connect instrument with **MICS** indication system to Tablet or PC

Send data to Tablet or PC:

- by Touchscreen
- by Multifunctional button push (activated in CONNECTION menu)
- by Timer (activated in Timer menu)
- from Internal Memory

## MEMORY

For save measuring data to internal caliper's memory touch data area on screen or short button push. You can view saved data through menu or send Wireless connection to Windows PC, Android or iOS devices.

Basic STATISTIC functions:

MAX - maximum saved value

MIN - minimum saved value

Avg - average value

D - variance VAR(x)



Saved values

Each value can be  
Deleted or Send to  
application

...	...	...	ALL
+7.3563			
-0.1109			
+1.2293			
+26.9993			
-8.8673			

...	...	...	...
...	...	...	...
...	...	...	...
...	...	...	...

Button ALL select all values

All values can be Deleted  
or Send to application

Memory sub-menu



...	...	...	Mode
...	...	...	Standard

Selecting Standard mode or  
No saving data to internal memory

# USB DATA TRANSFER

MICROTECH




## CONNECT MICRO-USB CABLE TO RADIUS GAUGE FIRSTLY

Activate USB data transfer in CONNECTION menu

Data will be send in USB HID mode to any app directly

Switch on USB data transmission

Activating multifunctional button to save value to  
memory or send data by touchscreeb ur button push

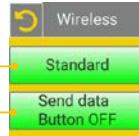

Configurate USB data transfer format



Connect instrument with **MICS** indication system to Tablet or PC

Send data to Tablet or PC:


- by Touchscreen
- by Multifactinal button push (activted in CONNECTION menu)
- by Timer (activated in Timer menu)
- from Internal Memory



USE TOUCHSCREEN TO OPERATE MENU

# MENU NAVIGATION

MENU button

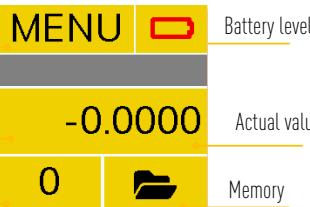

Colour can be changed according function

## MEMORY WITH STATISTIC

		ALL		Statistic
+7.3563			MAX:	+26.999
-0.1109			MIN:	8.8673
+1.2293			AVG:	+5.3213
+26.9993			D:	+26.863
-8.8673				

## MENU CONFIGURATION



## MAIN MENU

LIMITS  
color Go/NoGo

Max/Min

Enable

MAX

ERROR COMPENSATION  
mathematical correction

Temp.comp.

Solid alloys Mo

+0.00

WIRELESS  
modes of data transmission

Mode OFF

UART OFF

Keypad ON

CONRG



MEMORY SETTING

SOFTWARE  
link to download appMAX/MIN  
indicating max or min value

Formula

AX+Bx+C

Set MIN

FORMULA MODE  
Ax<sup>2</sup>+Bx+C

Timer

+000 sec.

RESET

TEMPERATURE COMPENSATION  
manual correction

Resolution

X.0000

Millimeters

RESOLUTION  
selected up to 0.0001mm

Extra

Axis Mode

Normal

CONNECT

USB  
USB connection configuration

Device

PIN

RESET

DEVICE SETTING  
pin, reset

Display

Angle 180

Sleep 90°

RESET

CALIBRATION DATE



# MICS SYSTEM FUNCTIONS

MICROTECH



## LIMITS GO/NOGO

MENU SETTING		Colour indication limits	MAIN SCREEN INDICATION
	+000.000	MAX value	-10.005
	+000.000	MIN value	+8.0608
		zero values	0 mm
			NoGo Go

**MAX - NoGo** more MAX value  
**MIN - NoGo** less MIN value  
**RANGE - Go** between MIN & MAX  
**NONE - disactivating mode**

## MAX/MIN

MENU SETTING		Indication and saving MAX or MIN values	MAIN SCREEN INDICATION
	Max/Min	ENABLE - activating mode	-2.9184
	Enable	MAX - indicating MAX measured value	7.2241
	MAX	MIN - indicating MIN measured value	0 mm
			MIN MAX

## FORMULA

MENU SETTING		FORMULA $Ax^2+Bx+C$	EXAMPLE OF FORMULA USING
	Formula: $4x^2+Bx+C$	 A: +000.000 B: +001.000 C: +000.000 	Standard measuring    A=0, B=1, C=0 PRESET 50mm    A=0, B=1, C=50 Value magnification x3    A=0, B=3, C=0 Square value    A=1, B=0, C=0
	AX+BX+C	Long push digit to select value	
	Set args	Reset to zero arguments	

## TIMER

MENU SETTING		Saving data to memory or sending Wireless by Timer
	Timer +000 sec.	Select timer period
		Reset to deactivate mode



## MATHEMATICAL ERROR COMPENSATION

### MENU SETTING



Select all points

Add new point for error compensation


Mathematical correction points with big error to normal values



actual values

correct values by up&down button

confirm point correction

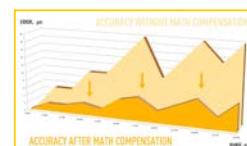

use gauge blocks or measuring machine for points correction



## TEMPERATURE COMPENSATION

### MENU SETTING

Re-calculation detail size to calibration conditions (20°C)



7 types of material for selection



Manual Temperature setting

7 types of material:

- glass, quartz, solid alloys
- granite, graphite
- Fe, Ni, Fe alloys
- stainless steel
- cooper, Cu alloys
- aluminium, al alloys
- acrylic sheet



## RESOLUTION

### MENU SETTING

### MAIN SCREEN INDICATION



Resolution selecting

mm/inch conversion

+8.0608

Selecting resolution of value on main screen and memory



## EXTRA (Axis mode)

### MENU SETTING



Selecting normal or inverted axis mode (+/- value indication)

Reading base reconnection for some types of calipers

# MICS SYSTEM FUNCTIONS

MICROTECH



## CONNECTION

### MENU SETTING

Activating or disactivating wireless data transfer



Switch between Wireless/USB/ no data

Activating multifunctional button to save value to memory or send data by touchscrreb ur button push



## USB CONFIGURATION

### MENU SETTING



## PIN & RESET

### MENU SETTING

Activating PIN to device setting



RESET to factory settings



## DISPLAY SETTING

### MENU SETTING

DISPLAY ROTATION, BRIGHTNESS, SLEEPING MODE



Display rotation 0°, 90°, 180°, 270°

- Sleep OFF (15 s low brightness off, sleep off)
- Sleep 15s (15 s low brightness on, sleep off)
- Sleep ON (15 s low brightness on, sleep on)






## MEMORY SETTINGS

### MENU SETTING

Activating or disactivating saving values to memory

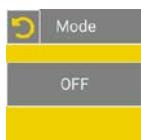

**Standard** - saving values to memory

**OFF** - disable saving to memory

		<b>ALL</b>
		+7.3563
		-0.1109
		+1.2293
		+26.9993
		-8.8673



## LINK TO SOFTWARE

### MENU SETTING



QR Link to MICROTECH web site page

with MDS Software download

- Android, iOS, Windows versions
- Free and Pro versions
- Manuals



Windows



iOS



ANDROID




## CALIBRATION DATE

### MENU SETTING

Calibration date info



Push for change date info

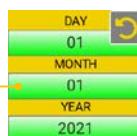

## DEVICE INFO

### MENU SETTING



Information about device

- device name
- firmware version
- MAC adress for easy connection

MICROTECH

VIDEO



**MICROTECH**

innovative measuring instruments

61001, Kharkiv, Ukraine, str. Rustaveli, 39

tel.: +38 (057) 739-03-50

[www.microtech.ua](http://www.microtech.ua)

[tool@microtech.ua](mailto:tool@microtech.ua)

Change without prior notice